

Embedded Software Update Guide

This document contains the information required by the user to update the embedded software (hereinafter – the firmware).

Внимание

The update tool requires a Windows operating system not older than Windows 7.

1. Preparation

1. Connect the device to the **Ethernet** network and apply power.
2. Save the device configuration. During the update, all data will be erased and factory settings will be restored.
3. Download and save the update folder on your computer's hard drive. The folder contains the batch file **update.bat** and two directories: **bin** and **data**.

2. Installation

To update the firmware, perform the following steps:

1. Run the **update.bat** batch file.
2. In the window that appears, enter the device's IP address (see Fig. 1).

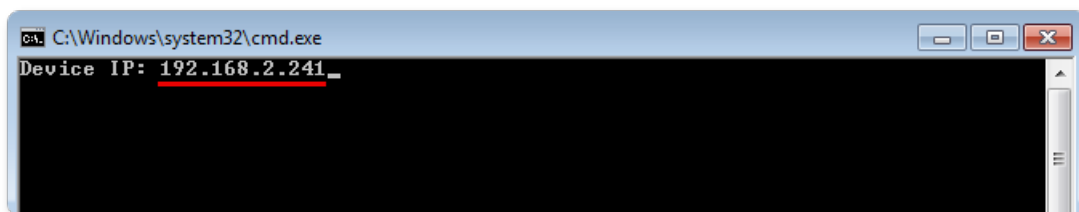


Рис. 1. Input field for the device IP address.

3. If the device is password-protected, enter the password (see Fig. 2).
4. Wait for the update process to complete. The message «Update successful» indicates that the update has finished correctly (see Fig. 3).
5. Press any key to exit the update program. The device will reboot automatically.
6. Wait for the device to complete rebooting.

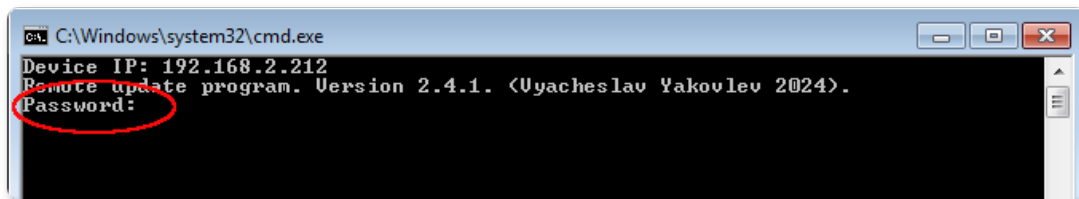


Рис. 2. Entering the device access password.

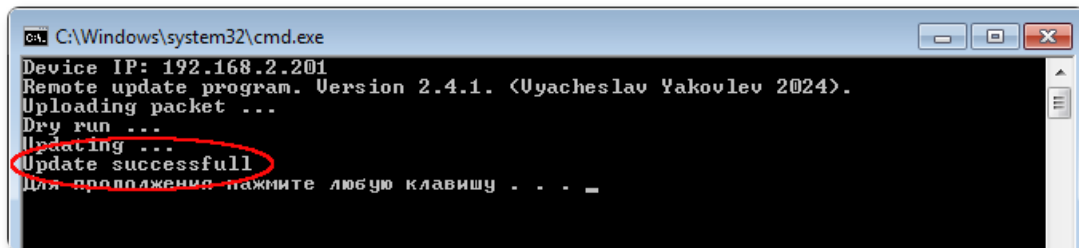


Рис. 3. Window after successful firmware update.

3. Firmware Version Check

To verify that the firmware has been successfully updated, check the device version information and confirm that the new version is installed.